


For Top or Bottom

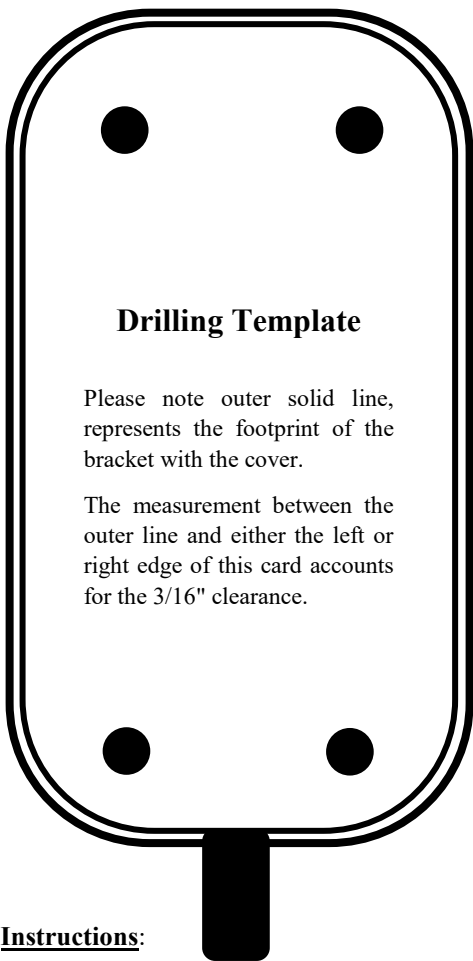

Drilling Template

Please note outer solid line, represents the footprint of the bracket with the cover.

The measurement between the outer line and either the left or right edge of this card accounts for the 3/16" clearance.

Instructions:

1. Place one of the templates against entry door frame and tape template to desired height.
2. Holding the handrail, place the rail's top bracket over the taped up top template to determine placement for the bottom template.
Line up the top bracket to the top templates inner outline and confirm screw holes match up (no white paper showing). Then, while holding the rail in place, place the bottom template under the bottom bracket. Tape it in place once the bracket lines up with the templates inner outline and screw holes.
3. Confirm all the holes line up. Remove Rail from template and drill pilot holes based on *stud or non-stud mounting instructions*.