


Installation Instruction: H271, H277, H279

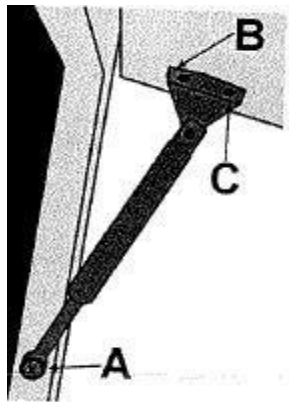

H271
Metal



H277
Plastic



H279
Metal and Plastic

These Cabinet Door Support instructions assume a position looking toward the cabinet door.

- 1) With the cabinet door either removed or propped open, measure down from the inside top frame 5 ½". Place a mark here and also mark the center of the frame inside. This is where the single hole in the single eyelet of the strut is mounted.
- 2) Place a single screw through the barrel hole and then attach to the cabinet frame where marked. This screw will not be tightened completely, since it is a pivot point for the strut. See figure "A".
- 3) Turn the attachment flange so that the flush side is facing out. See figure "B".
- 4) Lower the cabinet door until it reaches the desired angle. Move the mounting flange against the door keeping it as straight as possible so that it will not rub on the frame when closed. Mark the mounting holes in the center of their opening. See figure "C". It is better to install the screws or drill a pilot hole before final mounting. Verify that the screws are short enough not to penetrate your cabinet door prior to installing. In some cases, a smaller screw than was supplied may be needed.
- 5) Mount the flange to the door, and tighten. Test the closure to make sure nothing is rubbing and the door closes completely. Make any adjustments needed at this point. In some cases, a cabinet door might need 2 struts due to its overall weight.